




sparco
Kids

CHILD CAR SEAT SK60001

INSTRUCTION MANUAL

GB

40-135
cm

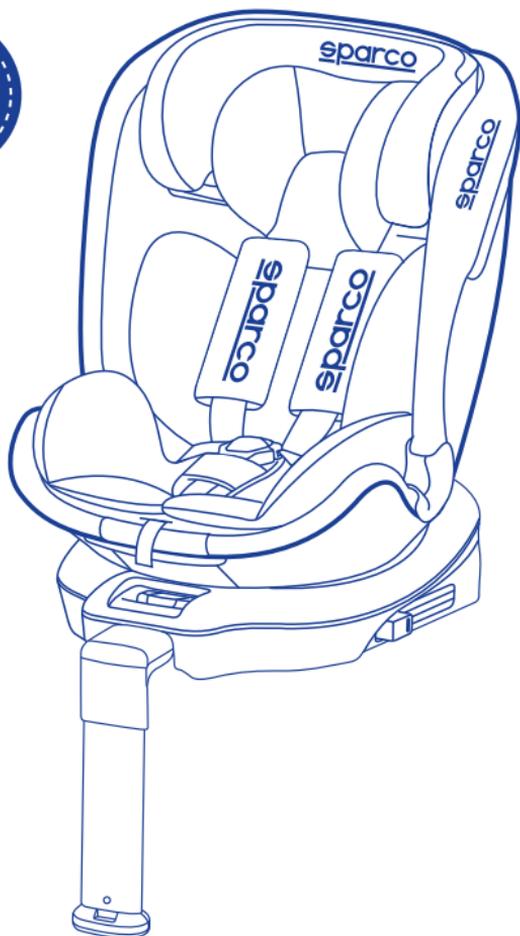

sparco
Kids

ECER129

202201

DIRECTORY

TO DEAR USER	03
PRODUCT OVERVIEW	04
SAFETY WARNING	06
USAGE	08
3.1 Install position of the child seat in vehicle	08
3.2 Adjust the headrest	09
3.3 Checking the shoulder strap height	09
3.4 Usage of buckle	10
3.5 Adjust the length of harness	10
3.6 Removable and hidden objects	11
3.7 The method to store shoulder straps with chest pad and buckle	12
3.8 Adjust the ISOFIX attachments	13
3.9 Usage of the support leg	14
3.10 The method of rotate seat	15
3.11 Usage of reclining system	16
INSTALLATION	17
4.1 Installed rearward-facing	17
4.2 Installed forward-facing	19
4.3 Installed forward-facing	20
MAINTENANCE AND CLEANING	22
5.1 Daily maintenance	22
5.2 Washing instruction	23
5.3 Remove and assemble the fabric cover	23
THE MAIN TECHNICAL PARAMETERS	24

TO DEAR USER

GB

Congratulations on your purchase of the child restraint system.
Please read this instruction manual carefully before use.
If you have any questions concerning the use of this child restraint system, please do not hesitate to contact with us.

⚠ IMPORTANT

DO NOT use forward facing before the child's age exceeds 15 months.

⚠ IMPORTANT

DO NOT use the device in seating positions where an active frontal airbag installed.

PRODUCT OVERVIEW

i-Size ECRS (40-105cm) Notice:

- This is an i-Size Enhanced Child Restraint System. It is approved according to UN Regulation No.129, for use in, i-Size compatible vehicle seating positions as indicated by vehicle manufacturers in the vehicle users' manual.
- If in doubt, consult either the Enhanced Child Restraint System manufacturer or the retailer.

i-Size booster seats ECRS (105-135cm) Notice:

- This is a i-Size booster seat Enhanced Child Restraint System. It is approved according to UN Regulation No.129, for use primarily in "i-Size seating position" as indicated by vehicle manufacturers in the vehicle user's manual.
- If in doubt, consult either the Enhanced Child Restraint System manufacturer or the retailer.

i-Size ECRS




Additional marking




PRODUCT OVERVIEW

GB

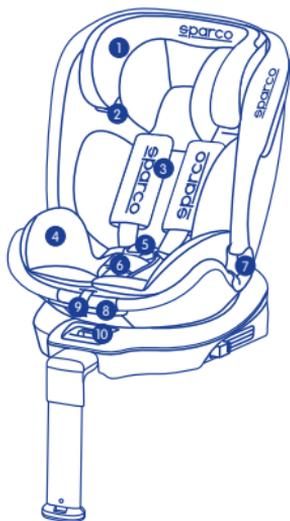

- ① Headrest
- ② The guide groove of the headrest
- ③ Shoulder pads
- ④ Comfortable cushion
- ⑤ Buckle
- ⑥ Crotch pad
- ⑦ The guide groove of the body

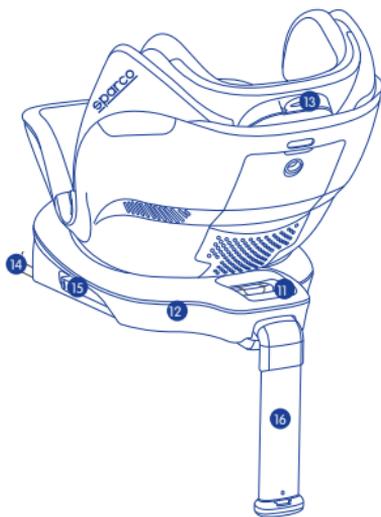

- ⑧ Body angle adjuster
- ⑨ Harness adjuster strap
- ⑩ Support leg unlock button
- ⑪ Rotation adjuster
- ⑫ Base
- ⑬ Handle of headrest
- ⑭ ISOFIX release button
- ⑮ ISOFIX attachment
- ⑯ Support leg

SAFETY WARNING

- This product can be rearward-facing used for children with a stature of 40-105cm (Weight: 0-18kg, about 0-4 years old), using ISOFIX+Support leg to fix the child restraint system.
- This product can also be forward-facing used by 5-point safety system for children with a stature of 83-105cm (Weight: 9-18kg, about 9 months-4 years old), using ISOFIX+Support leg to fix the child restraint system.
- This product can also be forward-facing used for children with a stature of 105-135cm (Weight: 15-36kg, about 3-12 years old), using adult three-point belt to fix the child restraint system, or using ISOFIX and adult three-point belt together to fix the child restraint system.
- Do not use any load bearing contact points other than those described in the instructions and marked in the child restraint when in 105-135cm.
- Please keep for future reference, a storage compartment for the instructions is located on the back of the child seat.
- Do not use this child seat at home. It has not been designed for home use and should only be used in your car.
- Do not use rearward facing child seat in seating positions where there is an active frontal airbag installed, death or serious injury can occur.
- For the reason of safety, the child seat must be fixed inside the vehicle using ISOFIX anchorages even if you do not put your child inside the child seat.
- The rigid items and plastic parts of a child seat shall be so located and installed that they are not liable, during everyday use of the vehicle to become trapped by a moveable seat or in a door of the vehicle.
- Any straps holding the restraint to the vehicle should be tight;
- Any support-leg should be in contact with the vehicle floor;

SAFETY WARNING

GB


- Any straps restraining the child should be adjusted to the child's body;
- Straps should not be twisted;
- Ensure that any lap strap is worn low down, so that the pelvis is firmly engaged, shall be stressed;
- The device should be replaced when it has been subject to violent stresses in an accident;
- It's dangerous to make any alterations or additions to the device without the approval of the Type Approval Authority, also dangerous not to follow closely the installation instructions provided by the manufacturer;
- When the chair is not provided with a textile cover, the chair should be kept away from sunlight, otherwise it may be too hot for the child's skin;
- Don't leave your child in the device unattended.
- Any luggage or other object liable to cause injuries in the event of a collision shall be properly secured;
- The ECRS shall not be used without the cover;
- The seat cover should not be replaced with any other than the one recommended by the manufacturer, because the cover constitutes an integral part of the restraint performance;
- The instructions shall be retained on the device for its life period or in the vehicle handbook in the case of built-in restraints;
- The user shall also be referred to the vehicle manufacturer's handbook;
- Never use a second-hand product, as you can never be certain what was happened to it.
- This child seat has been designed for the European market and conforms to the car seat regulations currently in force: European Union ECE R44. PLEASE NOTE that this seat doesn't meet the U.S.A. regulation.

USAGE

3.1 Install position of the child seat in vehicle




- Only suitable if the approved vehicles are fitted with 3 point safety-belt, approved to UN/ECE Regulation No.16 or other equivalent standards.

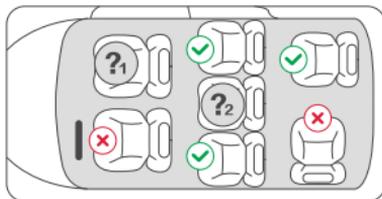

- ① Not to use rearward-facing in seating positions where an active frontal airbag is installed.
- ② Only use on this seat if ISOFIX anchorages are fitted.

3.2 Adjust the headrest

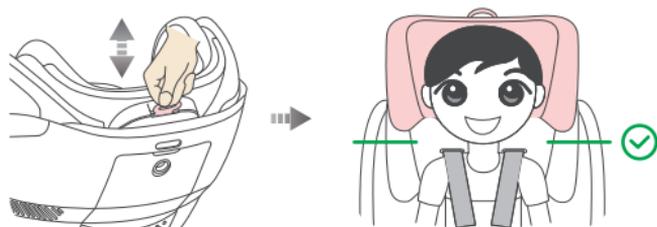

Picture 1

- As shown in picture 1, pull the adjusting ring to adjust the headrest up and down, and hold it to the correct position.
The headrest has 7 gears which can be adjusted up or down according to the child's height.

3.3 Checking the shoulder strap height



- Always check that the shoulder straps are at the correct height for your child. The child's shoulder straps should always be threaded through the slots in the cover and seat shell that are closest to the top of your child's shoulders.

USAGE

3.4 Usage of buckle



buckle (sketch map)

- Step1: Get the left and the right pieces of buckle together.
- Step2: Insert the two pieces into the slot of the buckle. At the same time, hearing "click" means the buckle gets stuck, pull the pieces of the buckle and check whether the buckle is locked correctly.

Step 3: If you want to release the safety belts, it needs to press the red button, then the pieces pop up.

3.5 Adjust the length of harness



Picture 1

- Picture1: Tighten the harness.

Pull the harness upward to remove the slack from the lap sections of the harness then pull the front stretch belt until the harness is fully tightened.

The harness should be adjusted as tightly as possible without causing discomfort to your child. A loose harness can be dangerous.

Check the harness adjuster and tighten each time when the child is placed in the seat.




2

Picture 2

- Picture 2: Loosen the harness.

The harness can be slackened by pressing the adjuster (under the seat cover) on the front of the seat. Press down the adjuster as you grip the two harness with your another hand. Pull the harness towards you to loosen the harness.

3.6 Removable and hidden objects

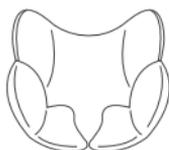


cushion



Triangle sponge

Stature > 60cm : the above items need to be removed



shoulder pads and the shoulder straps



crotch pad




buckle (sketch map)

Stature 105-135cm : the above items need to be hidden

USAGE

3.7 The method to store shoulder straps with chest pad and buckle

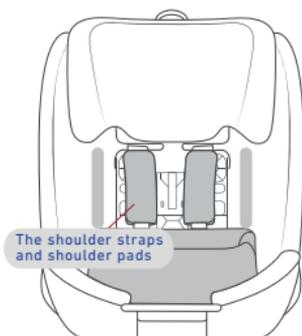

- 1 Step 1: Open the buckle and the cloth cover of seat back;
- 2 Step 2: Store the shoulder straps with shoulder pad on both sides of the seat. Tighten the harness adjuster strap properly and close up the cloth cover of seat back;



- 3 Lift up the cloth cover of the seat, and put the disassembled buckle into the storage slot.

3.8 Adjust the ISOFIX attachments




- The ISOFIX attachments can be adjusted for many positions to fit the different positions of ISOFIX low anchorages extending from car seat. Press down the release button to adjust ISOFIX attachment of both sides to the longest.
- Then put the ISOFIX attachments into guide sleeves, and insert them into ISOFIX anchorages. Make sure that you have heard a "click" and the ISOFIX latching indication shows GREEN.
- If you want to release the ISOFIX attachments, just installation of the ISOFIX attachments is finished. Push the red release button of the ISOFIX chuck at the direction as shown, the ISOFIX chuck will be released.
- After installed the ISOFIX chuck, push the child restraint forwards until it is tight against the car seat. Now, the ISOFIX base is installed in place.


USAGE

3.9 Usage of the support leg


When child stature in 40-105cm, the support leg is in the usage state

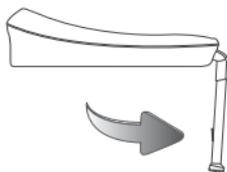

- 1 Take out the support leg from the lower cover of the base, which keep about 90° to the base.

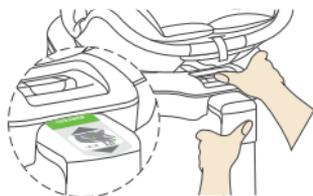

- 2 Press and hold the support leg lock button, while holding the support leg and pull it out to correct position.

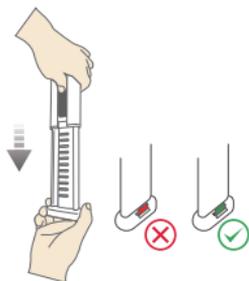


- 3 The method to adjust the length of the support leg:
Press and hold the adjustment button on the support leg, then adjust the length up and down until it hits the car ground. The bottom of the support leg will turn green.


When child stature in 105-135cm, the support leg is in the stowed state. If you want to put away the support leg, just press the above

3 2 1 operation.

3.10 The method of rotate seat

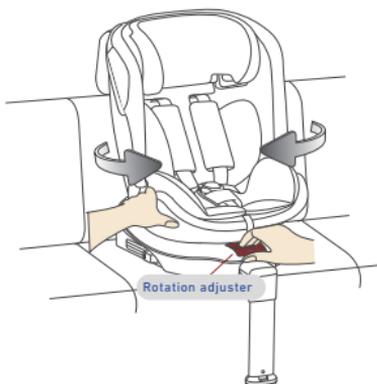

- 1 Pull out the rotation adjuster with one hand and rotate the safety seat with the other hand, both left and right directions can be rotated;

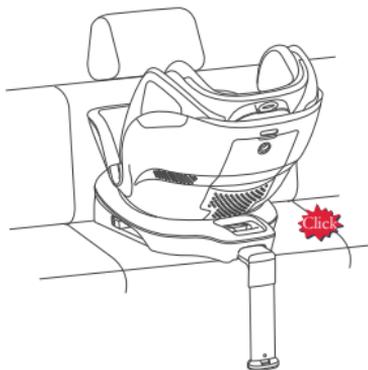

- 2 When you hear a "click" sound, it is indicated that the gear is in place.




When child stature in 40-83cm, the safety seat should rearward-facing.

When child stature in 83-105cm, the safety seat can forward-facing or rearward-facing.


When child stature in 105-135cm, the safety seat should forward-facing.

USAGE

3.11 Usage of reclining system

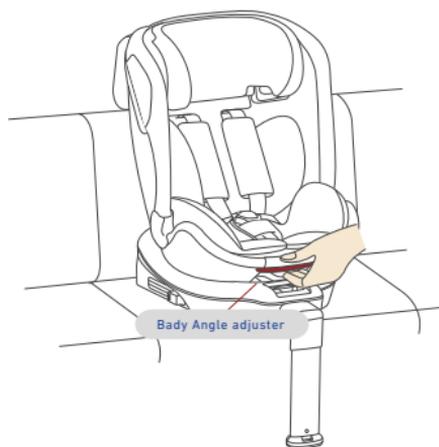

- 1 Pull out the angle adjuster to adjust the seat front and rear.

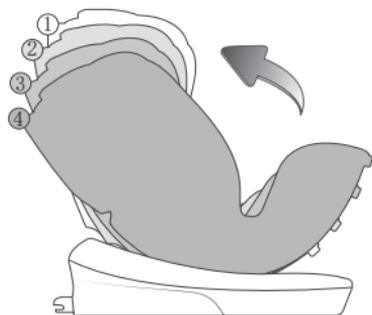

- Upright gear - 1st gear
- Recline gear - 2nd gear
- Recline gear - 3rd gear
- Recline gear - 4th gear

- 2 The car seat can recline in 4 different positions, as shown in the above picture.

Forward facing:

Stature 83-105 CM: ①②③④

Stature 105-135 CM: ①

INSTALLATION

GB

4.1 Installed rearward-facing




Stature: 40-105cm

Usage: ISOFIX+Support leg



DO NOT use forward facing before the child's age exceeds 15 months.

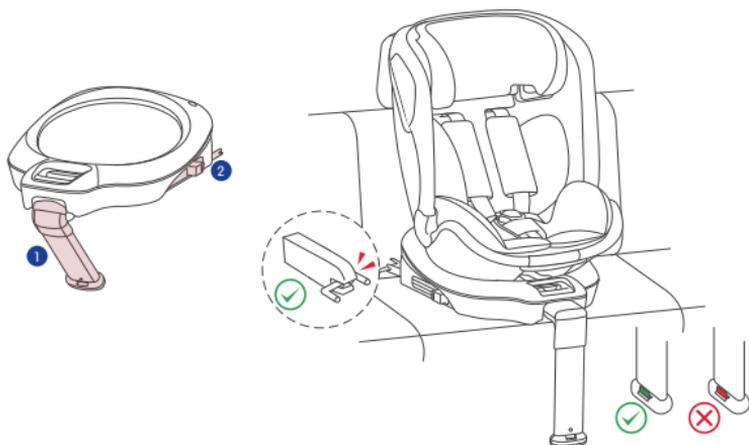


- 1 First, pull out the support leg of the base (see 3.9);
- 2 Second, pull out the ISOFIX attachment (see 3.8);
- 3 Third, place the child safety seat on the car seat;

INSTALLATION



- 4 Rotate the seat to the position of the car door, then put the child in the safety seat, adjust the shoulder straps and lock the buckle (see 3.3~3.5);

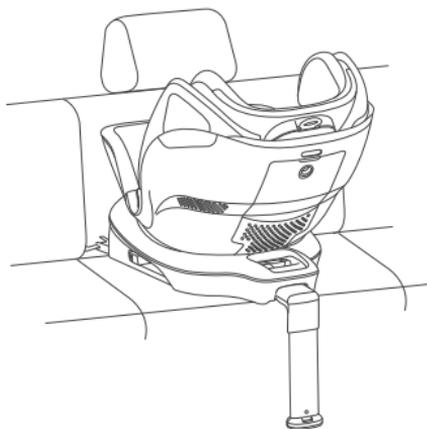

- 5 Finally, fix the seat in rearward.


INSTALLATION

GB

4.2 Installed forward-facing

Stature: 83-105cm

Usage: ISOFIX+Support leg

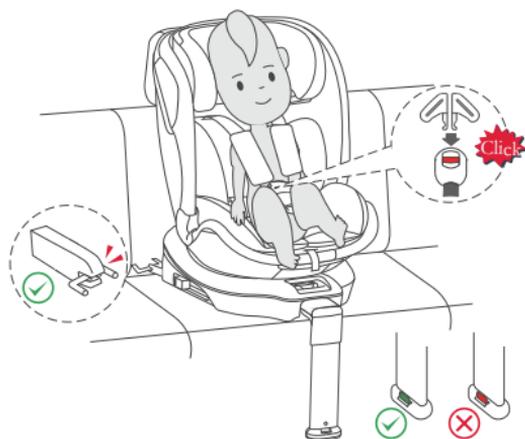

- 1 First, pull out the support leg of the base (see 3.9);
- 2 Second, pull out the ISOFIX attachment (see 3.8);
- 3 Third, place the child safety seat on the car seat;
- 4 Finally, put the child in the safety seat, adjust the shoulder straps and lock the buckle (see 3.3~3.5).



Stature > 60cm : the above items
need to be removed

INSTALLATION


4.3 Installed forward-facing

Stature: 105-135cm

Usage①: Fixed with ISOFIX + adult three-point seat belt.



- 1 Put away the support leg (see 3.9)
- 2 Pull out the Fix attachment (see 3.8)
- 3 Place the child on the child restraint system. Adjust the headrest height to ensure that the headrest is at the child's shoulder height and fixed well;

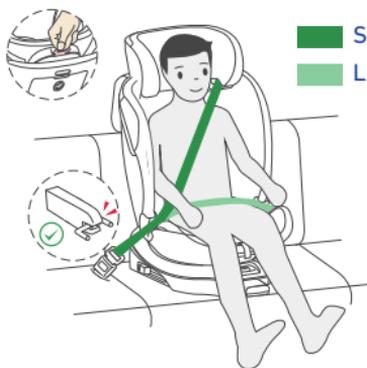

■ Shoulder belt

■ Lap belt



After belt fixed, the seat buckle and belt guide hook can not be placed in this position. Please contact the manufacturer if in doubt.

⚠ Make sure the car seat belt is not slack or twisted.

- 4 According to the installation path, insert the car seat belt across the child's body into the car groove of the car seat; Make sure that the car seat shoulder belt passes through the guide groove of the headrest, and pull up the car seat lap belt to check whether it is locked.

INSTALLATION

GB

Stature: 105-135cm


Usage②: Fixed with adult three-point seat belt.



- ① Put away the support leg (see 3.9)



Stature 105-135cm:
the above items need to be hidden

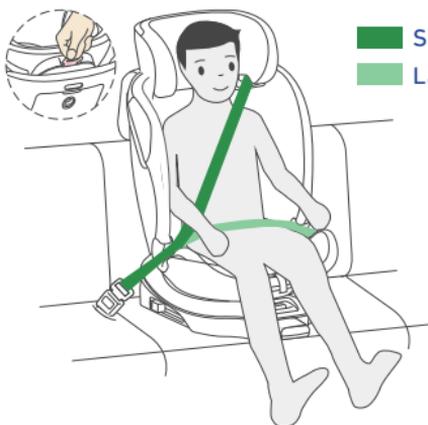

Shoulder belt

Lap belt



After belt fixed, the seat buckle and belt guide hook can not be placed in this position. Please contact the manufacturer if in doubt.

- ⚠ Make sure the car seat belt is not slack or twisted.

- ② Place the child on the child restraint system. Adjust the headrest height to ensure that the headrest is at the child's shoulder height and fixed well;
- ③ According to the installation path, insert the car seat belt across the child's body into the car groove of the car seat; Make sure that the car seat shoulder belt passes through the guide groove of the headrest, and pull up the car seat lap belt to check whether it is locked.

MAINTENANCE AND CLEANING

5.1 Daily maintenance

- In daily use, check periodically the child seat. The child seat should be replaced after an accident.
- Please keep this child seat in dry and ventilated place to avoid damp moldy.
- If the child seat becomes dusty, clean the seat belt and the plastic pieces by swiping them with a damp sponge and let it dry under ambient.
- If food or drink drop accidentally on the buckle, disassemble the seat belt from the child seat and rinse it gently by warm water.
- Leave it dry under ambient .
- For cleaning the entire child seat fabric cover, please refer to the 5.2 washing instruction.

5.2 Washing instruction

- Never use any solvent, chemical detergent or lubricant on any part of your child seat.



Hand wash, water
temperature
below 30°C



Do not
bleach



Dryclean, any
solvent except
trichloroethylene.



Do not
tumble dry




Do not iron

5.3 Remove and assemble the fabric cover

- Firstly, remove the crotch pad and buckle of the child seat .
- Open the zip on the headrest and remove the headrest cover. Tear the velcros of the backrest cover open and then remove the shoulder straps and comfortable cushion as well as the backrest cover.
- To assemble the fabric cover of the child seat , repeat the above prescribed procedures in reverse order.

THE MAIN TECHNICAL PARAMETERS

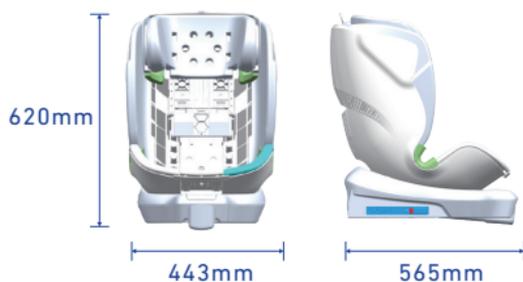

- Distance from front to back of the seat: 565mm
- Distance from left to right of the seat: 443mm
- Height of the seat: 620mm
- Weight of the seat: 11 ± 0.5 kg



Produced and distributed under Sparco's licence by:

CAR PARTS DESIGN TRADING CO., LTD.

21st Floor Tai Yau Building 181

Johnston Road Wanchai, Hong Kong

marketing@carpadesign.net-www.carpadesign.net

www.sparco-kids.com

MANUALE
INSTRUCTION



CARTA
PAPER

Raccolta differenziata. Verifica le disposizioni locali.
Separate collection. Verify the local arrangements.